

## Tail Message / Station Message

**/etc/asterisk/local/**

Add a folder /StationMSG

Then make an audio file with Audacity and add it to this folder

e.g. tailmsg.ulaw

**/etc/asterisk/rpt.conf**

Scroll down till you see ; TAIL MESSAGE and remove the ; from the following lines.

```
;tailmessagetime=540000  
; Play a tail message every 90 mins  
;tailsquashedtime=300000  
; If squashed by another user,  
; try again after 5 mins  
;tailmessagelist=/etc/asterisk/local/StationMSG/tailmsg  
; list of messages to be played for tail message
```

You can add more messages just by adding it to the string and it will cycle through them.

e.g. tailmessagelist=/etc/asterisk/local/StationMSG/tailmsg,/root/nameofsecondfile